

# Powered Speaker User Guide



## Contents

 
How to Connect Your Powered Speaker.....	2
Bluetooth .....	3
Wireless Microphones .....	4
Other Features .....	4

## How to Connect Your Powered Speaker

Your powered speaker will have one of two connections in for the sound, either AUX left and right (red and white) or AUX Single Input 3.5mm Jack Plug.



1

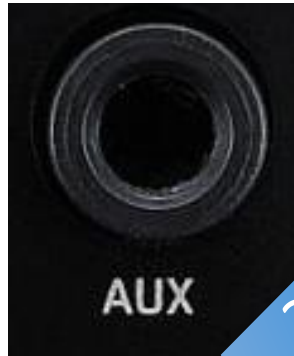

2

- 1) You can send the red and white inputs from your karaoke machine directly into your powered speaker (send the yellow or HDMI if available direct to a TV for the on-screen lyrics)
- 2) If your powered speaker only has this input, you can get one of two accessories to enable connection from your karaoke machine to the powered speaker.



This jack plug which connects like this single AUX plug into your powered speaker



the


**OR**



A Line to AV Stereo cable which you would plug the red and white into your karaoke machine audio outputs and the single black into the AUX connection on your powered speaker.

**Please Note: If the music through your powered speaker is sounding distorted when turning the volume up and you're using a karaoke machine, check the Music Volume on your karaoke machine and turn that down to about half way, if not a bit lower as required until the distortion improves.**


# Bluetooth

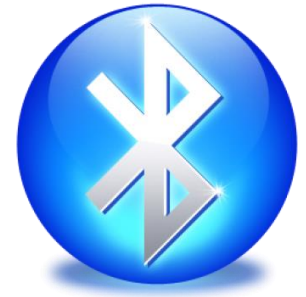


If your Powered Speaker has Bluetooth Connectivity you can stream music from your phone, tablet, iPad, any device that is Bluetooth enabled.

## To connect a device...


**Step 1** Open your settings on the device, open the Bluetooth settings

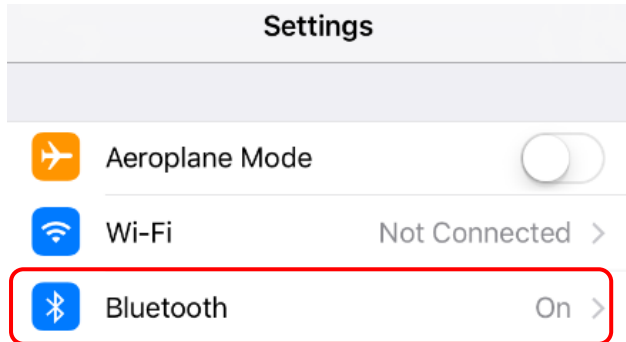

 **Step 2** Search for Other devices and select the appropriate name for your speaker as it appears.

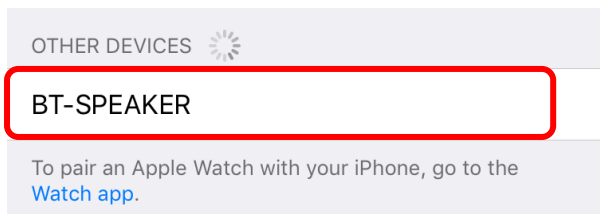

**Step 3** Select the powered speaker so it can connect, your device will say its connected once it's done

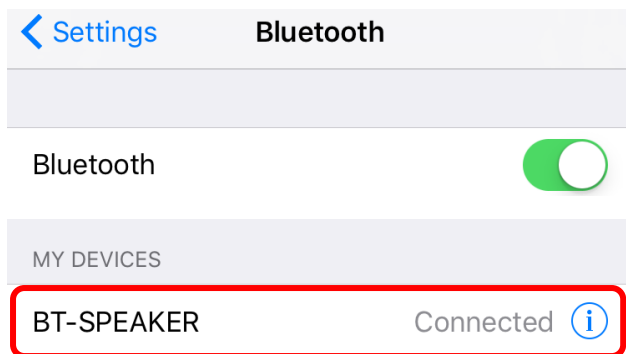

**Please Note:** If the volume is too low or too loud coming through your powered speaker, turn the volume appropriately up or down on your device, this will project through the speaker.

## Wireless Microphones

Depending on the model of Powered Speaker, it will either come with Wired or Wireless Microphones.

The Wireless Microphones need 2x AA batteries in each microphone to operate.

The battery life is approximately 6 hours for continuous use, switching them on and off continuously may drain the battery quicker.

Do not drop the wireless microphones as user damage is not covered by warranty.



## Other Features

Depending on the model, your powered speaker might also have the below extra functions:

- FM Radio – for radio listening
- Headphone Input – to plug in your headphones for private listening
- Rechargeable Battery with approx. 5 hours playing time
  - **Please Note:** If your Powered Speaker has a rechargeable battery you should use it on the battery power until its flat, then recharge it to full power. If you do run it continuously on mains power, you may damage the battery and it may cease to work. Incorrect use of the battery causing it to stop working as it should is not covered by warranty.
- Party Lights
- USB and SD Card Inputs to play standard MP3 Music Files