


T-730 Kids Sing-Along Machine - User Guide

We hope you enjoy your Kids Sing-Along Machine

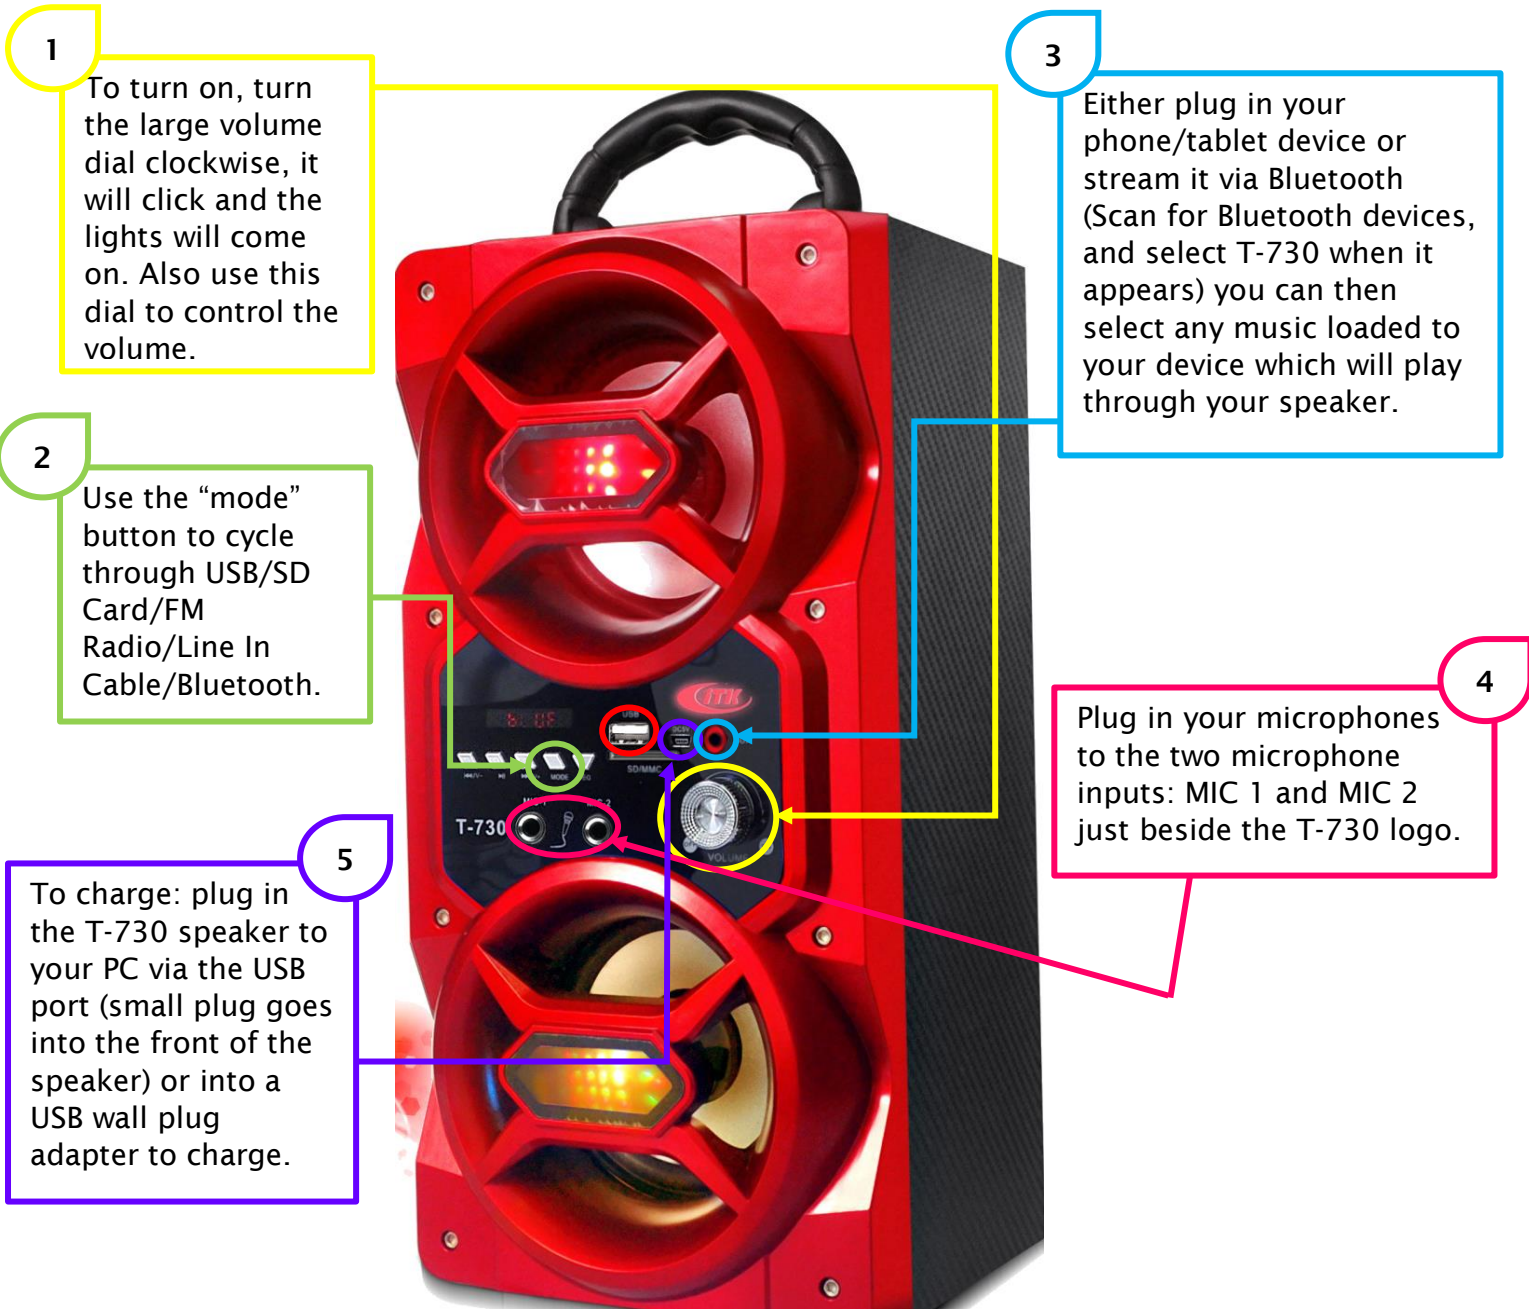

Handy Hint:

Best way to use, turn the volume on the T-730 Kids Speaker up to maximum (all the way clockwise) and then use your phone/tablet volume controls to control how high/low you want the overall volume to be.

Happy Singing!