














Magic Sing ET-23KH



How To Connect Your System



Connection

	Standard AV / RCA [TV]	HDMI [HDTV]
Step 1	<p>Plug the power cable into the back of the Magic Sing Base Unit, and the wall plug into an electricity wall socket.</p>  <p><i>The ET-23KH unit allows you to use HDMI (HD-TV) or standard RCA (red, white, yellow) connections depending on the television/sound system which you are using.</i></p>	
Step 2	<p>Choose your method of connection, AV or HDMI, and before doing anything, make sure the unit is SWITCHED OFF.</p> <p>Carefully slide back the top piece of plastic on the base unit revealing chip slots and a small switch.</p> <p>If you are using RCA, make sure the little black switch is toward “TV” and if you are using HDMI connections, flick it over to “HD-TV”</p> <div style="display: flex; justify-content: space-around;">   </div>	
Step 3	<p>Connect the AV single black end into the Magic Sing base unit</p> 	<p>Connect one end of the HDMI into the back of the base unit just under the text “HDTV”</p> 
Step 4	<p>You can plug the AV cables in 4 ways. Directly to your TV, into a Home Theatre System, into a Dedicated Karaoke Amplifier with 2 Speakers or into a Powered Speaker. See below for details. All require the yellow cable to go directly to your TV in a yellow video input.</p>	<p>Plug the other end of the HDMI cable into a HDMI input on your TV</p> 
Option 1	<p>You can plug all three AV cables into your TV’s RCA Input (red, white, yellow) however your sound will only be as good as your TV speakers are quite small and not really designed for karaoke use. Should you use just your TV you may receive a voice delay through the microphones, this is a limitation of your TV.</p> 	

<p>Option 2</p> 	<p>You can use a Home Theatre with red and white cables directly into your amplifier but should always change your amplifier settings to 2-Channel Stereo as all karaoke is in Stereo not 5.1 or 7.1 surround. However, be aware that even if you're using 2-Channel stereo, if your speakers are all very small satellite speakers you may still have a delay and or cause damage to them as they may be too small to handle karaoke.</p> <p>Please Note we never recommend the use of sound bars for karaoke.</p>	
<p>Option 3</p> 	<p>When using one of our dedicated amplifier and speaker packages, you plug the red and white into the amplifier directly.</p>	
<p>Option 4</p> 	<p>Powered Speakers means the amplifier is built into the one unit with the speaker, your Magic Sing will connect using either the straight red/white into the back of the speaker, or depending on the speaker model using a AV Jack to Line plug [Sold Separately].</p> 	
<p>Step 5</p>	<p>Once you're connected the way you want to be, switch the base unit on.</p> 	
<p>Step 6</p>	<p>Slide the back covers off the microphones and correctly insert 2x AA batteries in each of them and put the covers back on</p> 	
<p>Step 7</p>	<p>Switch the TV to the appropriate AV setting via your Source or Input button [depends on where you plugged it in on the back]</p>	<p>Switch the TV to the appropriate HDMI setting via your Source or Input button [depends on where you plugged it in on the back]</p>

<p>Step 8</p>	<p>Switch on both microphones till they show P-On which means they're switching on</p> 																																				
<p>Step 9</p>	<p>Open up your Magic Sing songbook, once you have decided on a song to sing from your Magic Sing song book, type the song number (you will find it on the left hand side of the book, beside the "Song Title") and press the GREEN "Play/Stop" button in the centre of the microphone.</p>  <table border="1" data-bbox="671 472 1129 808"> <thead> <tr> <th>NO.</th> <th>SONG TITLE</th> <th>VERSION</th> </tr> </thead> <tbody> <tr> <td>08151</td> <td>DAY IN THE LIFE</td> <td>BEATLES</td> </tr> <tr> <td>51598</td> <td>A DESIGN FOR LIFE</td> <td>MANIC STREET PREACHERS</td> </tr> <tr> <td>51605</td> <td>ANARCHY IN THE U.K.</td> <td>THE SEX PISTOLS</td> </tr> <tr> <td>51587</td> <td>ASHES TO ASHES</td> <td>DAVID BOWIE</td> </tr> <tr> <td>51597</td> <td>BAT OUT OF HELL</td> <td>MEAT LOAF</td> </tr> <tr> <td>06509</td> <td>BEAUTIFUL</td> <td>CHRISTINA AGUILERA</td> </tr> <tr> <td>51601</td> <td>COMMON PEOPLE</td> <td>PULP</td> </tr> <tr> <td>51586</td> <td>DON'T DREAM IT'S OVER</td> <td>CROWDED HOUSE</td> </tr> <tr> <td>07634</td> <td>DOWNTOWN</td> <td>PETULA CLARK</td> </tr> <tr> <td>09643</td> <td>ELEANOR RIGBY</td> <td>BEATLES</td> </tr> <tr> <td>09802</td> <td>EVERYBODY HURTS</td> <td>REM</td> </tr> </tbody> </table>	NO.	SONG TITLE	VERSION	08151	DAY IN THE LIFE	BEATLES	51598	A DESIGN FOR LIFE	MANIC STREET PREACHERS	51605	ANARCHY IN THE U.K.	THE SEX PISTOLS	51587	ASHES TO ASHES	DAVID BOWIE	51597	BAT OUT OF HELL	MEAT LOAF	06509	BEAUTIFUL	CHRISTINA AGUILERA	51601	COMMON PEOPLE	PULP	51586	DON'T DREAM IT'S OVER	CROWDED HOUSE	07634	DOWNTOWN	PETULA CLARK	09643	ELEANOR RIGBY	BEATLES	09802	EVERYBODY HURTS	REM
NO.	SONG TITLE	VERSION																																			
08151	DAY IN THE LIFE	BEATLES																																			
51598	A DESIGN FOR LIFE	MANIC STREET PREACHERS																																			
51605	ANARCHY IN THE U.K.	THE SEX PISTOLS																																			
51587	ASHES TO ASHES	DAVID BOWIE																																			
51597	BAT OUT OF HELL	MEAT LOAF																																			
06509	BEAUTIFUL	CHRISTINA AGUILERA																																			
51601	COMMON PEOPLE	PULP																																			
51586	DON'T DREAM IT'S OVER	CROWDED HOUSE																																			
07634	DOWNTOWN	PETULA CLARK																																			
09643	ELEANOR RIGBY	BEATLES																																			
09802	EVERYBODY HURTS	REM																																			
<p>Step 10</p>	<p>NOW SING!!!</p>																																				

Please Note: Voice Delay - Reasons you may be experiencing some voice delay is if you are plugged in solely to your television, your TV speakers will be working overtime trying to push out the sound of the music and your voice at the same time. As they are generally small speakers and you have to turn the volume up considerably. Your television may not be able to cope, resulting in this delay. Use your home theatre system/amplifier (see page 2) as you will bypass your television speakers.