

Magic Sing ET-23KH

How To Download



KARAOKE SONG DOWNLOADS
SINGLE SONGS & ALBUMS



Table of Contents

Understanding MP3+G Karaoke Tracks on Magic Sing	2
USB Tips	2
How to Download MP3+G	3

Understanding MP3+G Karaoke Tracks on Magic Sing

Yes, your Magic Sing ET-23KH is compatible with MP3+G Karaoke Files however there are a few limitations of the Magic Sing unit with regards to the download format to be aware of.

Don't download songs on Windows® 8 operating system as the files are not compatible thereafter when loaded onto USB stick, use Windows® 7 or earlier.

Songs listed as Multiplex Audio **MPX** will playback on the ET-23K with full cover vocals so you can sing-along, you cannot switch off the lead vocals with the ET-23KH so choose the standard version of the song if you don't want full vocals.

During MP3+G playback you cannot change the Key or Tempo of the song.

Apple Mac® Important Notice: The downloading process as tabled above is for Windows® PC's only, if you are using an Apple® Mac PC you need to use a free software program called "Stuffit Expander" instead of the built in Mac utility which alters the MP3+G files upon download as it doesn't recognize the format, causing them to no longer work. <https://www.picknmix.com.au/info/support-apple.asp>

Converting CD+G Discs to MP3+G Song Files

You can also convert CD+G discs into modern MP3+G song files for use on the ET-23KH for more information on this visit www.mp3g.com.au

USB Tips

Is your USB still not working with your unit and you have already followed all the correct download steps? Please make sure no other files are on the USB stick, like word documents etc. the USB must be 100% dedicated to MP3+G files

Try this! Reformat Your USB (FOR PC)

1. Insert your USB in your PC
2. Find the icon for the USB in "My Computer"
3. Empty USB – please make sure you have the files backed up on your computer.
4. Right click the USB drive icon
5. Select "Format"
6. Click "Start" – once process is complete your USB is formatted.
7. This should bring your USB back to FAT32 and allow you to reload all your music files to it, insert into your machine for easy on-screen playback!

Try this! Reformat Your USB (FOR MAC)


1. Insert USB into your MAC.
2. Make sure you have a backup of your files on your computer somewhere before deleting everything from the USB.
3. Go to "Spotlight" (Search) and type in and select "DISC UTILITY".
4. Click into the USB on the side panel.
5. Move onto the "Erase" tab
6. Choose the "Erase" button, NOT THE "Erase Free Space".
7. Confirm "Erase"
8. Move back to your USB, it is now reformatted, and you are able to put your songs back onto it and try again. It may be a good idea to do this regularly and think of it as servicing your car to keep it running right.

Download MP3+G Tracks for your Magic Sing

Step 1 Go to www.picknmix.com.au and choose either Single Song or Digital Albums for MP3+G


(for compatible MP3+G devices like the Sonken MP4000, Miic Star MS62, **Magic Sing ET23KH** and PCDJ Karaoke Hosting Software)

PICKNMIX
karaoke song downloads & custom discs

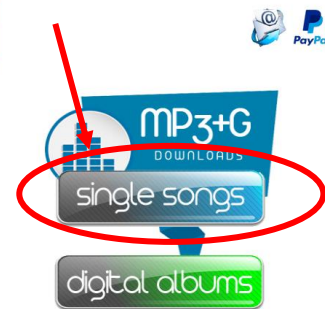

which karaoke format do i choose ?
cd+g - dvd - mp3+g - mp4

Step 2 Click "Sign-In or Register to add songs"

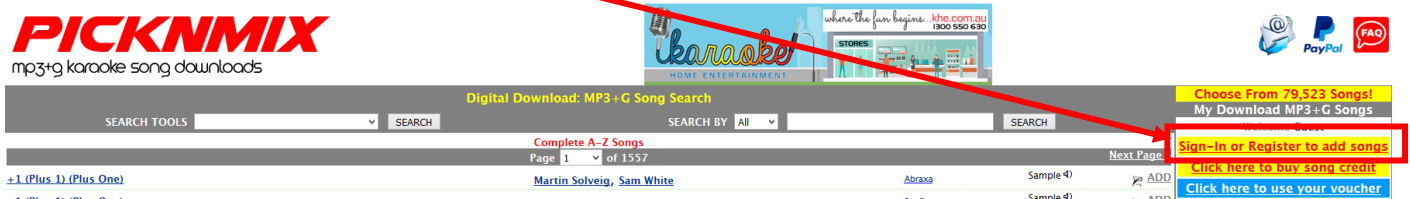

Step 3 Enter your KHE.com.au Account login details, and click "Sign-In" or if you do not have an account with KHE.com.au then click "New Customer, Click here"

Returning Customers... Sign in here

New Customer ? Click here

User Name Password

Automatically sign me in on this computer (cookie)

[Forgotten your password ?](#)

Step 4 Once you've logged in you will go back to the large list of songs which you can search through, you should see your Username in the top right hand corner on the side bar, and "Click here to buy song credit".

Click this button.



Step 5 You'll come to this screen below where you can see all the pricing tabled out for you, for how many songs, how much per song, and how much for the total voucher.

You pay the Price at the very end, for the entire selection of songs now. You can choose and download your songs over 12 months from the day you download your first song.

Select how many songs you want.

Read the **terms and conditions** & tick the box.

Select purchase song credit.

PICKNMIX
karaoke song downloads & custom discs

SUNFLY SBI
Karaoke
premium content



You have selected 5 songs for \$14.95

[Back To Songs](#) [Purchase Song Credit](#)

	Purchase Options	Songs	Rate Per Song	Price
<input type="radio"/>	001 DOWNLOAD SONG CREDIT	1	\$3.99	\$3.99
<input checked="" type="radio"/>	005 DOWNLOAD SONG CREDITS	5	\$2.99	\$14.95
<input type="radio"/>	010 DOWNLOAD SONG CREDITS	10	\$2.79	\$27.90
<input type="radio"/>	020 DOWNLOAD SONG CREDITS	20	\$2.49	\$49.80
<input type="radio"/>	100 DOWNLOAD SONG CREDITS	100	\$1.99	\$199.00

I have read the **Terms and Conditions** of the Limited Warranty and accept them, furthermore I acknowledge that this digital order is licensed and royalty paid by Karaoke Home Entertainment to APRA/AMCOS (Australia) and to each of the respective karaoke content providers (Sunfly Karaoke, SBI Karaoke, Abrava Karaoke, Aaron Aardvark Karaoke, Big Hits Karaoke, Zoom Karaoke) for use on one karaoke system only.

For each additional karaoke system they are used on you must re-purchase the same digital song again so each karaoke system has its own unique licensed digital copy of the song, otherwise your user license will be null and void in its entirety.

My song credit is valid for 12 months from first song used and that I have 15 days in which to download each of my selected songs.

Please retain your email as proof of purchase and that the user license has been paid, any known breaches of the user license will be reported to APRA/AMCOS and to Music Rights Australia and to each of the respective karaoke content providers as digital piracy.

serviced by **khe.com.au**

© Copyright 2001 / 2017
Karaoke Home Entertainment (ABN 90 965 670 247)
Established 1991. [Website terms of use](#)



Step 6 Follow the prompts, login to PayPal and process the payment. Or enter your card details into PayPal and process your payment.

Step 7 Once the payment has processed, you will go back to the screen with the songs listed and you can search by song title, or artist. Select ADD, beside each song you wish to download.


Step 8 Your songs will appear and create a list on the right-hand side of the page, and the website will tell you when you've selected all your songs.

If you're songs selected are correct, select the "Checkout" button

Step 9 Follow the prompts on screen to check out the songs, checking you have the correct songs all the way through. Please note: Once you've completed your order / downloaded your songs they cannot be exchanged / refunded due to strict licensing restrictions.

Step 10 Once you've completed the order, you will see under Order History, all your songs and a "DOWNLOAD" button beside them.


Click this button and you will see a bar / pop up, select Save As and choose your file location on your computer where you want the songs to download to. And click Save. The song will now download.

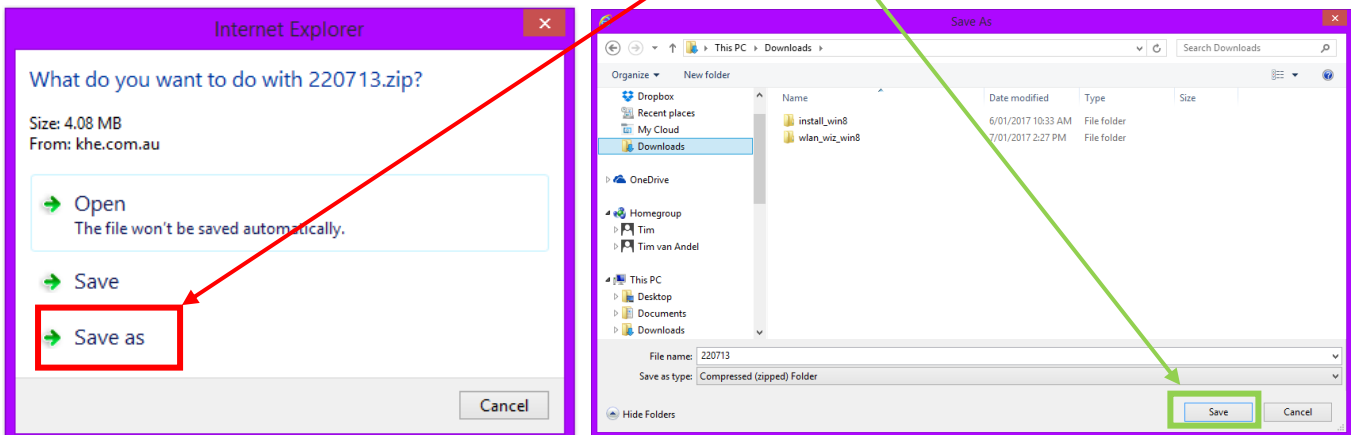

Follow this step for the rest of your songs.


Step 11 Once completed you will need to unzip your files.

 Right click on the file, select Extract All.

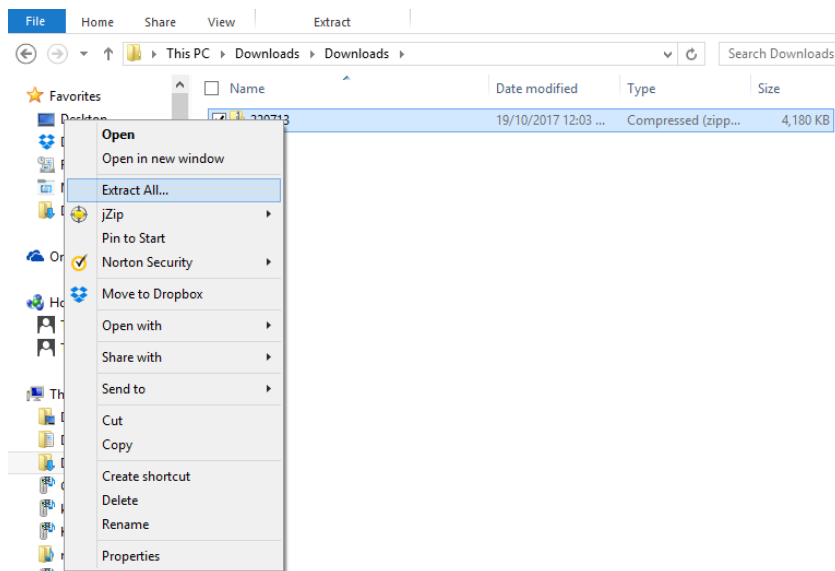

Step 12 Choose the destination to be your root folder, in this case Downloads is where I've put the song, I want the two files to extract into the main folder.

Click Extract.

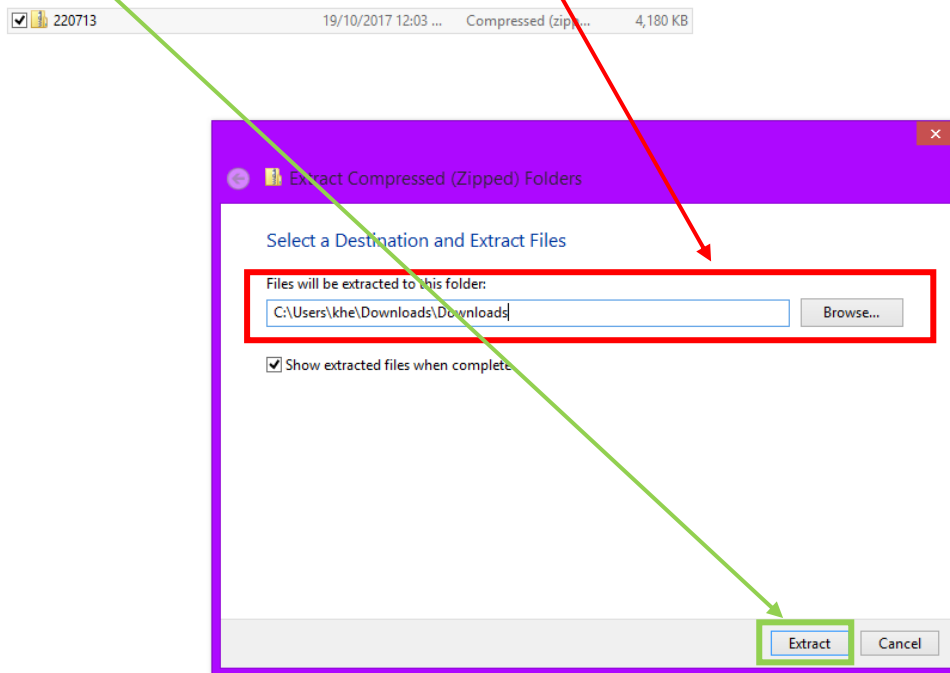

Step 13 You will now see the below, two files for the 1 song, and the zipped file, you can delete the zipped file. Keep the two files.

One is **.mp3** and the other is **.cdg** – the files must be named exactly the same except for this extension.

In a karaoke machine, these two files get played at the same time to give you the lyrics on screen and the music at the same time. Now you just copy to your USB / HDD / SD Card / Device and load into your machine accordingly.

