

Sonken MAX Karaoke

POWERED SPEAKER WITH 2 WIRELESS MICROPHONES



Contents

 
Ways to Use Your MAX Karaoke	2
Bluetooth Connectivity	2
USB / Micro SD Card Connection	3
Use YouTube Videos on the MAX Karaoke	4
Connect Another Device into the MAX Karaoke.....	4
Wireless Microphones	5
Rechargeable Battery.....	5
Control Panel.....	6
Remote Control.....	7
MAX Karaoke Options / Accessories Available	7

Ways to Use Your MAX Karaoke

Your new MAX Karaoke System is a very versatile piece of karaoke equipment, see below the different ways you can use it!


Bluetooth Connectivity

Your MAX Karaoke System has Bluetooth Connectivity so you can stream music from your phone, tablet, iPad, any device that is Bluetooth enabled.

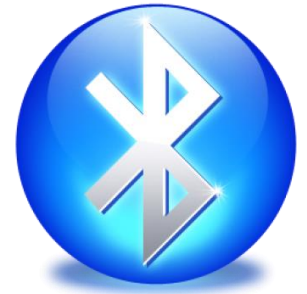


To connect a device...

 
Step 1 Open your settings on the device, open the Bluetooth settings

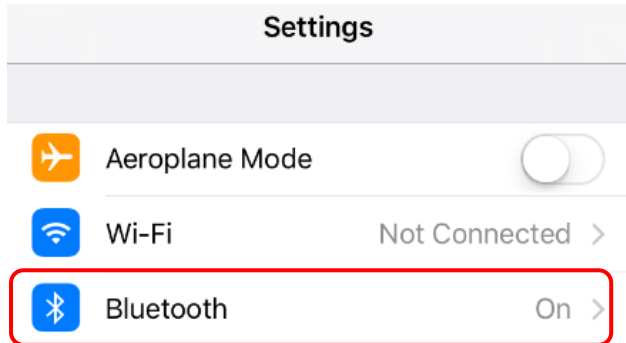

 Step 2 Search for Other devices and select the appropriate name for your speaker as it appears.

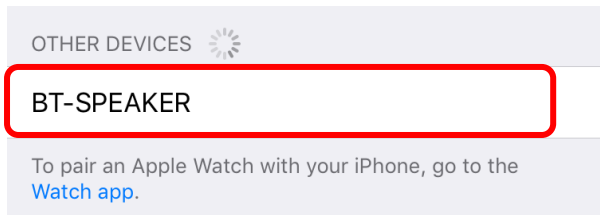

 Step 3 Select the powered speaker so it can connect, your device will say its connected once it's done

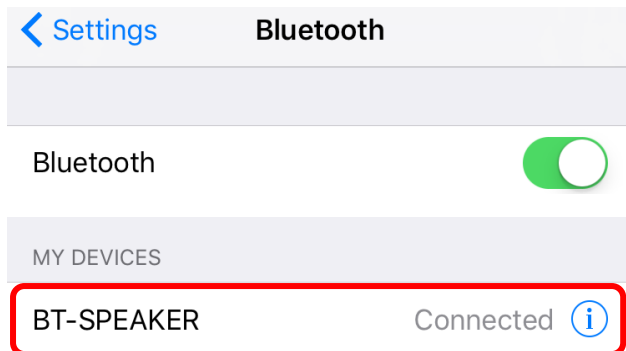

Please Note: If the volume is too low or too loud coming through your powered speaker, turn the volume appropriately up or down on your device, this will project through the speaker.

USB / Micro SD Card Connection

With your MAX Karaoke System you can input a USB or Micro SD Card with your favourite songs on it and listen to your music through Max.

You can play just standard MP3 songs for audio music playback through the MAX Karaoke. Please Note: This will not show any on-screen lyrics on the 15" LCD Screen, MP3 is audio only.

For On-Screen Karaoke Lyrics, you can purchase MP4 Karaoke Tracks and load them onto a USB stick to hear the music and see the on-screen lyrics appear on the 15" Screen.

We sell MP4 Karaoke at www.karaokemp4.com.au which you can purchase and download 24/7 through PayPal, we have over 60,000 Karaoke Songs on MP4.

 
MP4 Karaoke files from our site will appear like the below image.

You could also download MP4 video formats from YouTube and play the video clips or get access to other languages through YouTube. [See Page 4 for instructions]




Use YouTube Videos

The MAX Portable Karaoke System runs off MP4 video files, which means you can download your favourite songs from YouTube including languages outside of what has been produced for karaoke and sing along on the MAX Karaoke.

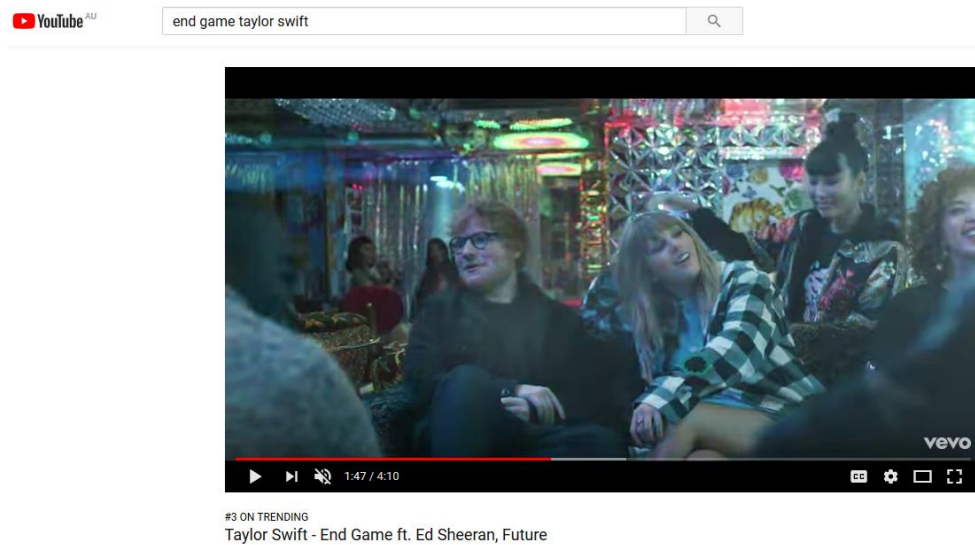

 How to download a video from YouTube: <https://www.onlinevideoconverter.com/video-converter>

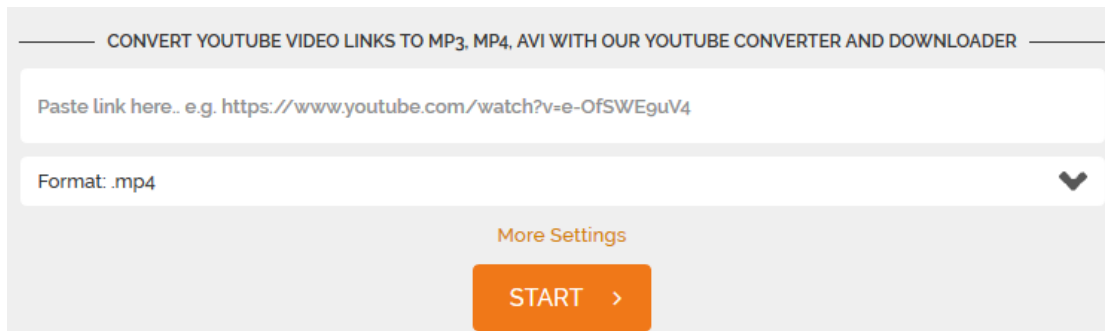

Once the file is downloaded, copy and paste it onto a USB Thumb Drive, put the USB in the USB slot on the top of the machine once copying is done and you'll find your files under "MOVIE" as their MP4 Video Files.

The video will show up as it does on Youtube if there is vocal, lyrics or no lyrics on screen when played on YouTube that is how it will appear on the MAX System!

Connect Another Device into the MAX Karaoke

Your MAX Karaoke System has an AV input allowing you to connect in a DVD player or a karaoke machine (disc player) and still use your Karaoke discs and use the MAX Karaoke for the sound and the screen.

To do this you will require a MAX Karaoke AV Cable, this can be purchased separately from Karaoke Home Entertainment.



Wireless Microphones

Depending on the model of Powered Speaker, it will either come with Wired or Wireless Microphones.

The Wireless Microphones need 2x AA batteries in each microphone to operate.

The battery life is approximately 6 hours for continuous use, switching them on and off continuously may drain the battery quicker.

 
Do not drop the wireless microphones as user damage is not covered by warranty.




Rechargeable Battery

Your MAX Karaoke comes with an internal rechargeable battery with approx. 5 hours playing time


Please Note: As the MAX Karaoke has a rechargeable battery you should use it on the battery power until its flat, then recharge it to full power. If you do run it continuously on mains power, you may damage the battery and it may cease to work. Incorrect use of the battery causing it to stop working as it should is not covered by warranty.

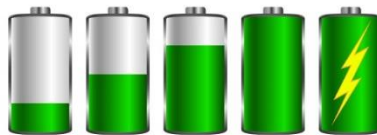

Control Panel

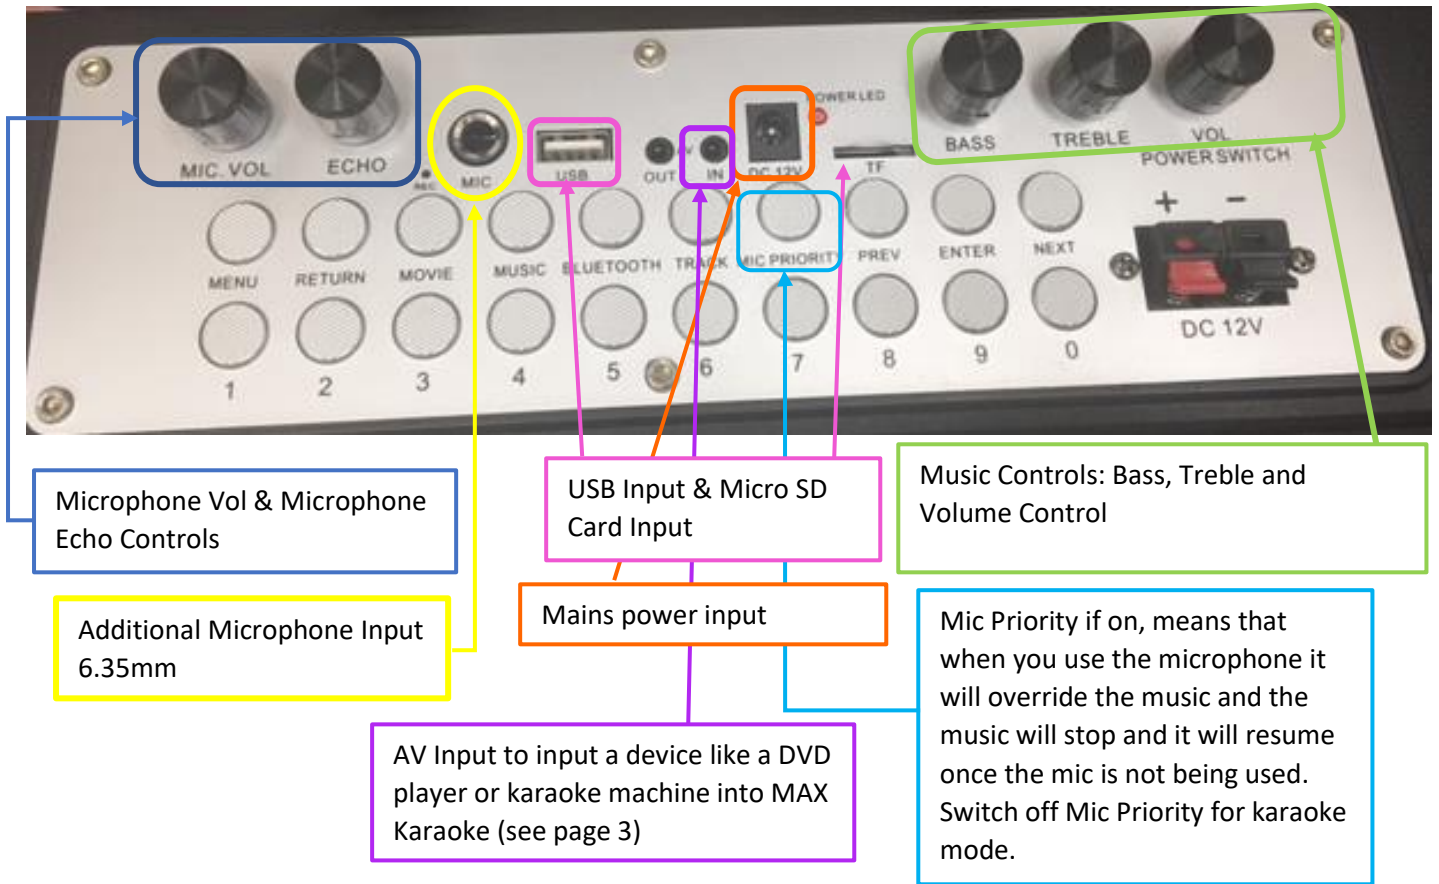 

Remote Control

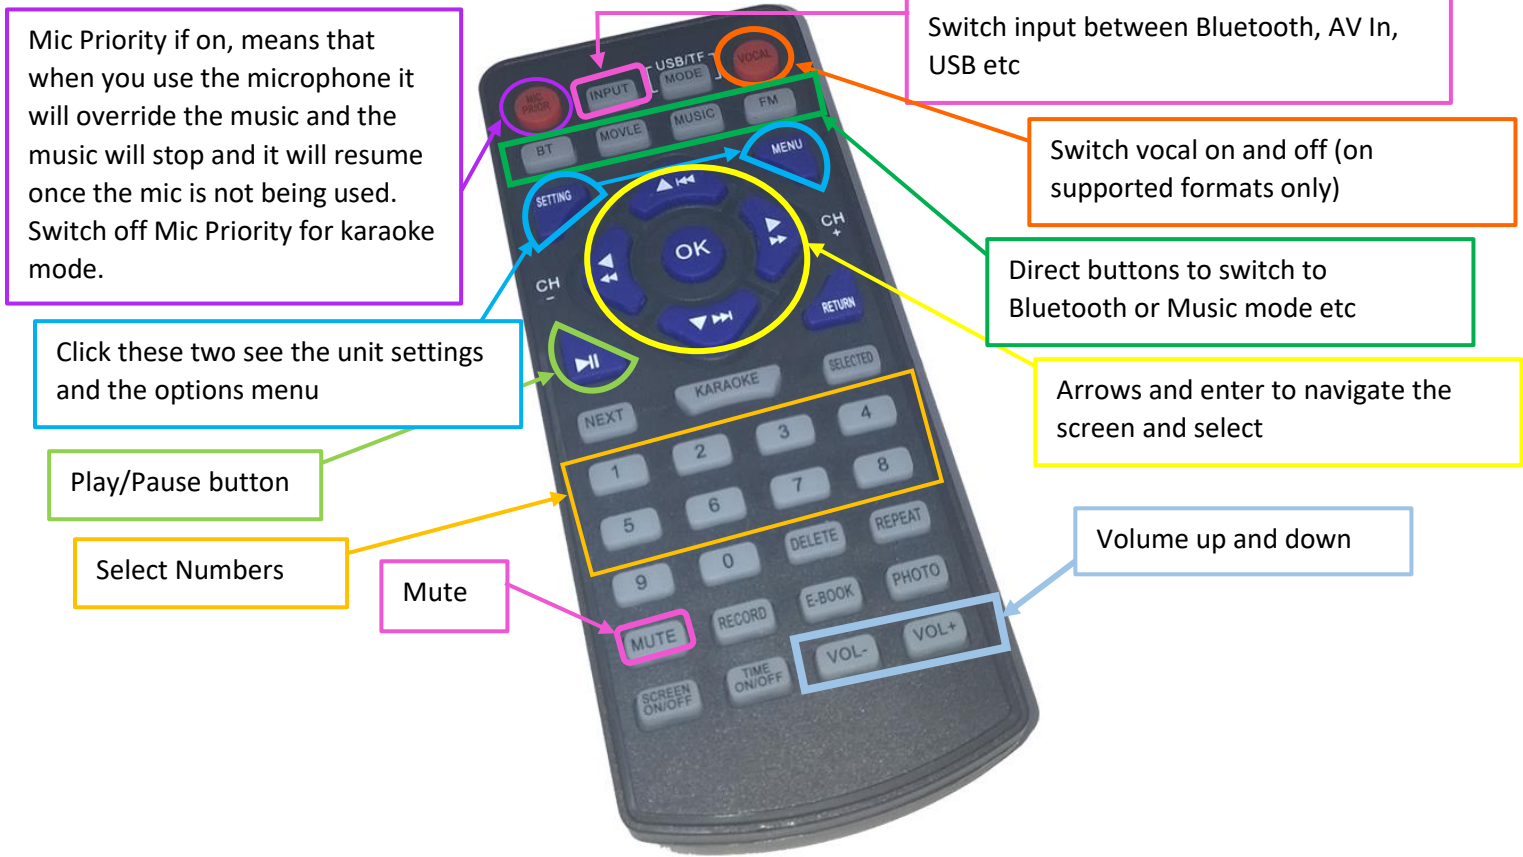 

MAX Karaoke Options / Accessories Available

1. You can purchase the additional Audio/Visual AV Cable to plug in external devices
2. You can add on a Mini Tripod Stand to get the MAX Karaoke Unit off the ground
3. You can also purchase our 800 MP4 Karaoke Song Ultimate Party Collection with Full Guide Vocals (MPX) on USB.

Available at www.maxkaraoke.com.au

We also stock:

- Karaoke MP4 Song Downloads at www.karaokemp4.com.au
- Microphone Protective Sock Covers