



Miic Star MS-62 Karaoke System

Troubleshooting: Wireless Microphone Pairing

If you find one or both of your Miic Star MS-62 Karaoke System are not working properly, buttons functioning and/or the microphone sound component, firstly we'd recommend you try brand new batteries.

And if one microphone is working try the batteries from the working microphone in the one that's not working. If this doesn't help, the microphones may need to be recalibrated and re-paired to the base unit.

We've found in majority of cases this recalibration / re-pairing of the microphones have fixed any issues.

Follow these steps to pair the microphones to the base unit...

Step 1 – Plug in the base unit to the TV and put two AA batteries in each microphone.

Step 2 – Make sure the base unit is off (light is red) and the two microphones are off (no lights).

Step 3 – Hold down the power button on the base unit until you see a box appear on the screen which says "pairing mics" then you can let go

Step 4 – Now rather quickly, grab both microphones and hold down both the on switches on the microphones until they are both flashing.

Step 5 – It will take a few minutes from here to recalibrate the microphones and pair them to the base unit. The screen will reset in approx. 3 minutes and you'll be able to use both microphones.

Note – If at first, immediately after recalibrating you try and use the microphones they don't work it means they're not finished re-pairing, give it a few more minutes and they will both work.

Try Again – If the microphone recalibration / re-pairing doesn't work the first time you can try it again, if your timing is off with the recalibration steps above it may not work. Be sure to follow the steps closely.