

9/7/2016

Song Book Creator

For the Sonken MP600 Karaoke Player



INSTRUCTION MANUAL FOR
UPGRADED MODELS OF SONKEN
MP600 KARAOKE PLAYERS ONLY

Upgrade your mp600 now at
<https://karaoke.selz.com/>


Tim van Andel
KARAOKE HOME ENTERTAINMENT




Create Your Song Book

TIP: For best results see [point 8](#) before starting this process.

1. Insert your USB memory stick with MP3+G songs pre-loaded.
2. Using the MP600 Remote Control press the **A-B** button.
3. The next prompt asks if you want to create the song list, using the remote control buttons select **YES** and click **ENTER**.

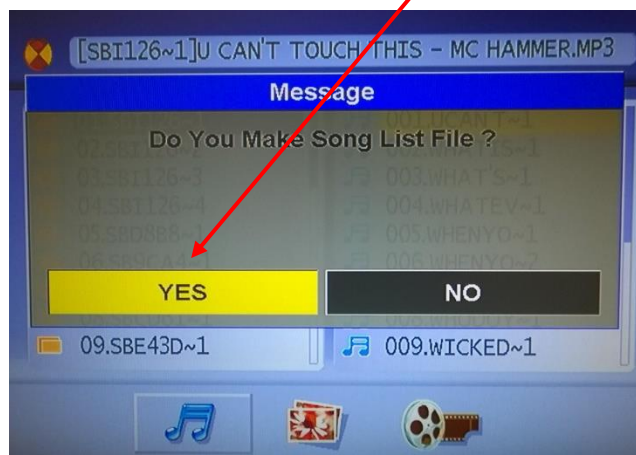


4. Then this screen will appear and show progress of song book being created for you.

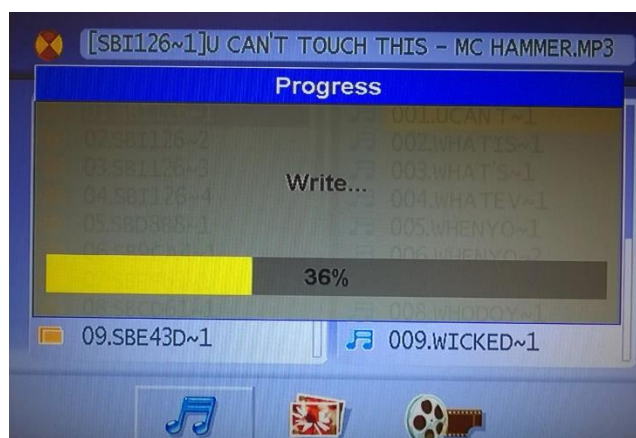



 5. Once completed this screen will appear, press ENTER on the remote control.

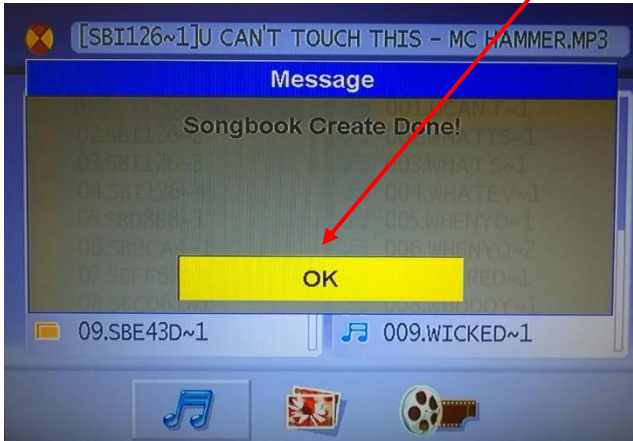


Then it will reload the USB song list, remove USB memory stick from the Sonken MP600 Player.

6. Insert USB into your personal computer.


You will require a compatible spreadsheet program like Microsoft Excel® to open your SONGLIST.csv file.

Here you can see the folders on the left side and I have click on a newly created folder the Sonken MP600 has created called **SONGBOOK**.

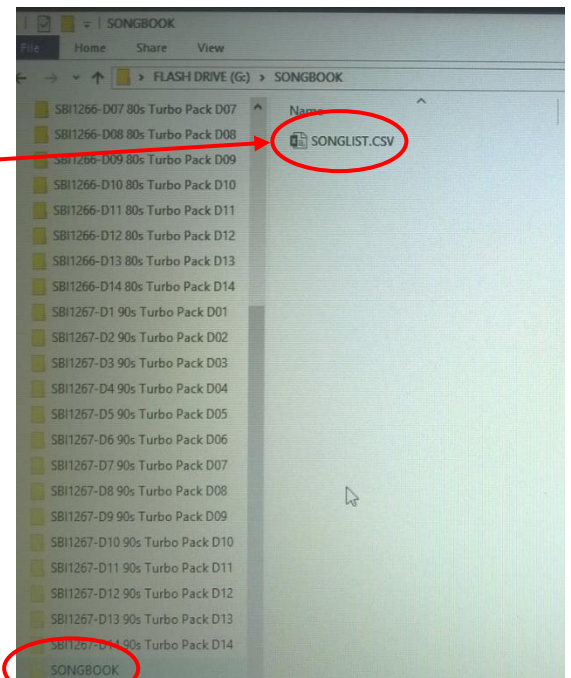



 7. Open the song list in the spreadsheet program and you can sort by Artist or Song Title.

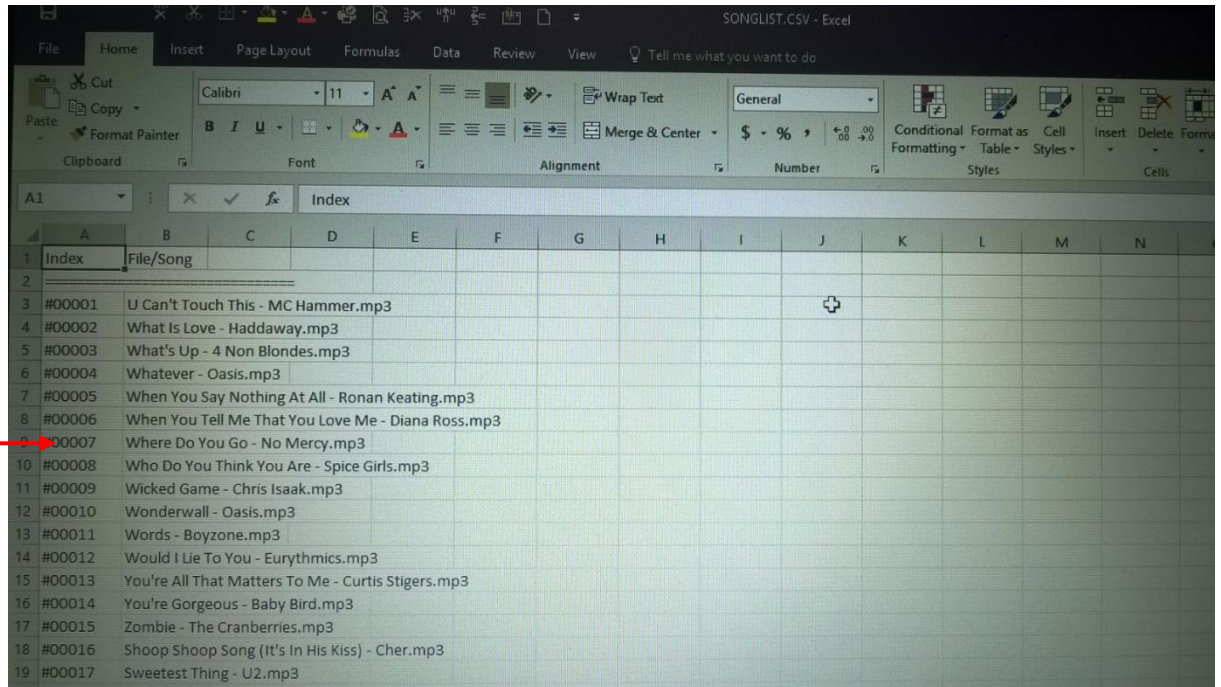

8. For the best results in creating your song book we recommend you spend some time to format your songs all the same way before you create your catalogue.

For example if your songs have additional information in the file name this will be present in your song book file the machine creates for you.

i.e. if your songs look like this

SFKK013-2_Madonna – Jump.mp3
 SFKK013-2_Madonna – Jump.cdg

Some of your songs might be missing the Artist Name, so again your song book will be incomplete.

SFKK013-2_Jump.mp3
 SFKK013-2_Jump.cdg

As you can see from the above picture we have cleaned all the files up so they have **Song Title** and **Artist names** for each separated by – and they are all formatted the same way like this.

Jump – Madonna.mp3
 Jump – Madonna.cdg



Each MP3+G song is made up of two files so make sure you rename both files otherwise the songs won't play as the machine plays both at the same time.

You just don't edit the file extension being .mp3 (audio) and .cdg (lyrics) leave them unchanged.

So do the work once and clean up your song files and then once the Sonken MP600 makes the song book for you don't need to make any changes in the spreadsheet.

Otherwise every time you add new songs you will be spending time in Excel cleaning up and will have to repeat that every time you make a new song book.

If the files are formatted correct the first time then you have no issues to fix later, just sort and print out.



www.mp600.com.au

www.khe.com.au

www.khe.co.nz